


## 300-111 - Pro Pedals Button Assignments

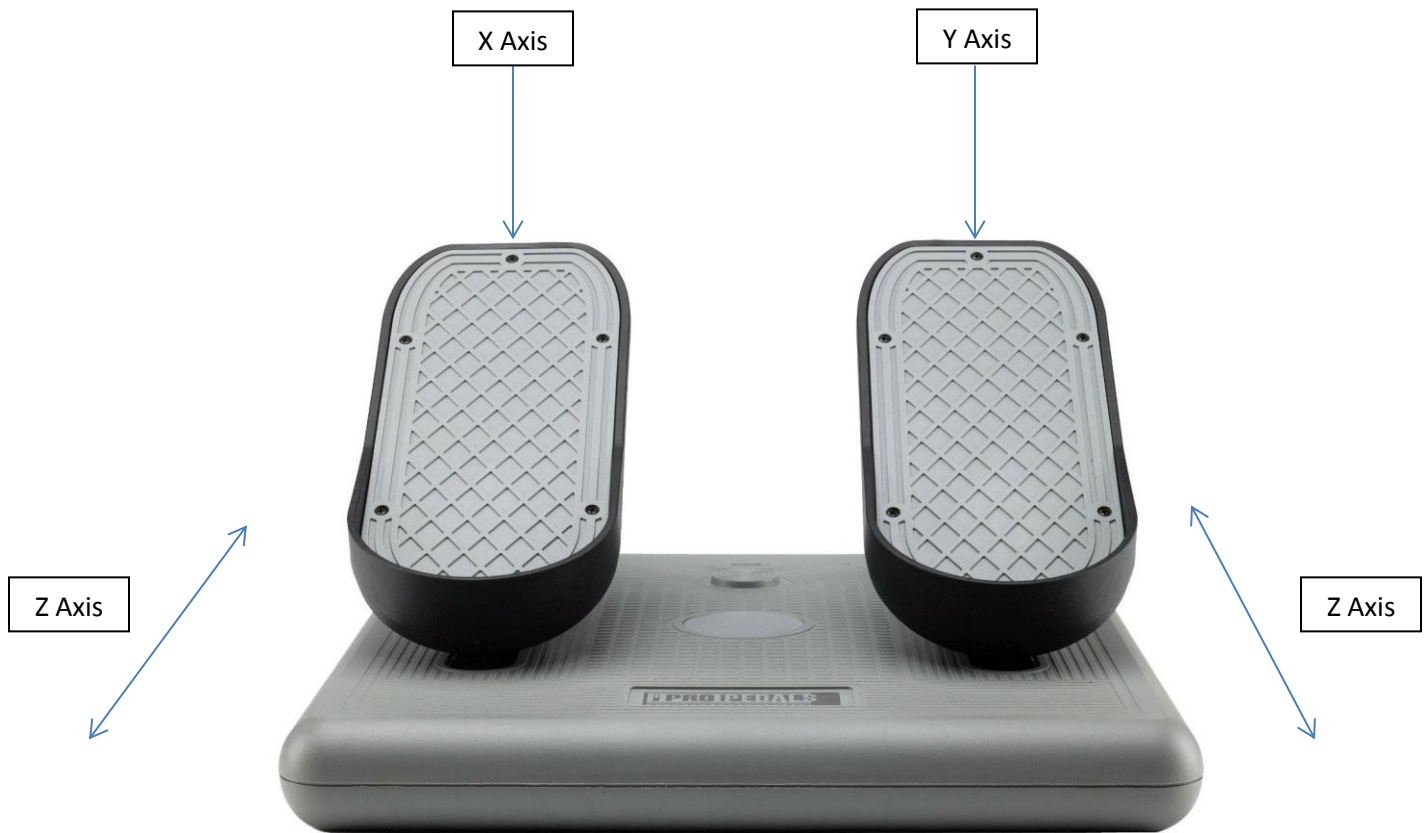

X Axis = Left Pedal, typically used for Left Brake  
Y Axis = Right Pedal, typically used for Right Brake  
Z Axis = Sliding motion, typically used for Rudder