

300-122 Pro Throttle Button Assignments



Button 1 = Microstick Button, also used to switch modes (Control Manager only)

Button 2 = Back Right Gray Button

Button 3 = Back Middle Gray Button

Button 4 = Back Left Gray Button

Buttons 5 through 8 = Four Way Hatswitch (Back)

Buttons 9 through 12 = Four Way Hatswitch (Top)

Buttons 13 through 16 = Four Way Hatswitch (Bottom)

POV Hatswitch = 8 Directions

X & Y Axes = Microstick, typically used for Ailerons/Elevator, or Cursor Control

Z Axis = Sliding motion, typically used for Throttle